


COVER EACH HALF OF WING SEPARATELY WITH PRE-SHRUNK JAP TISSUE. THEN ATTACH MOTOR STICK CLIPS USING MOTOR STICK AS GUIDE


NOTE: NO DIHEDRAL OR RUDDER

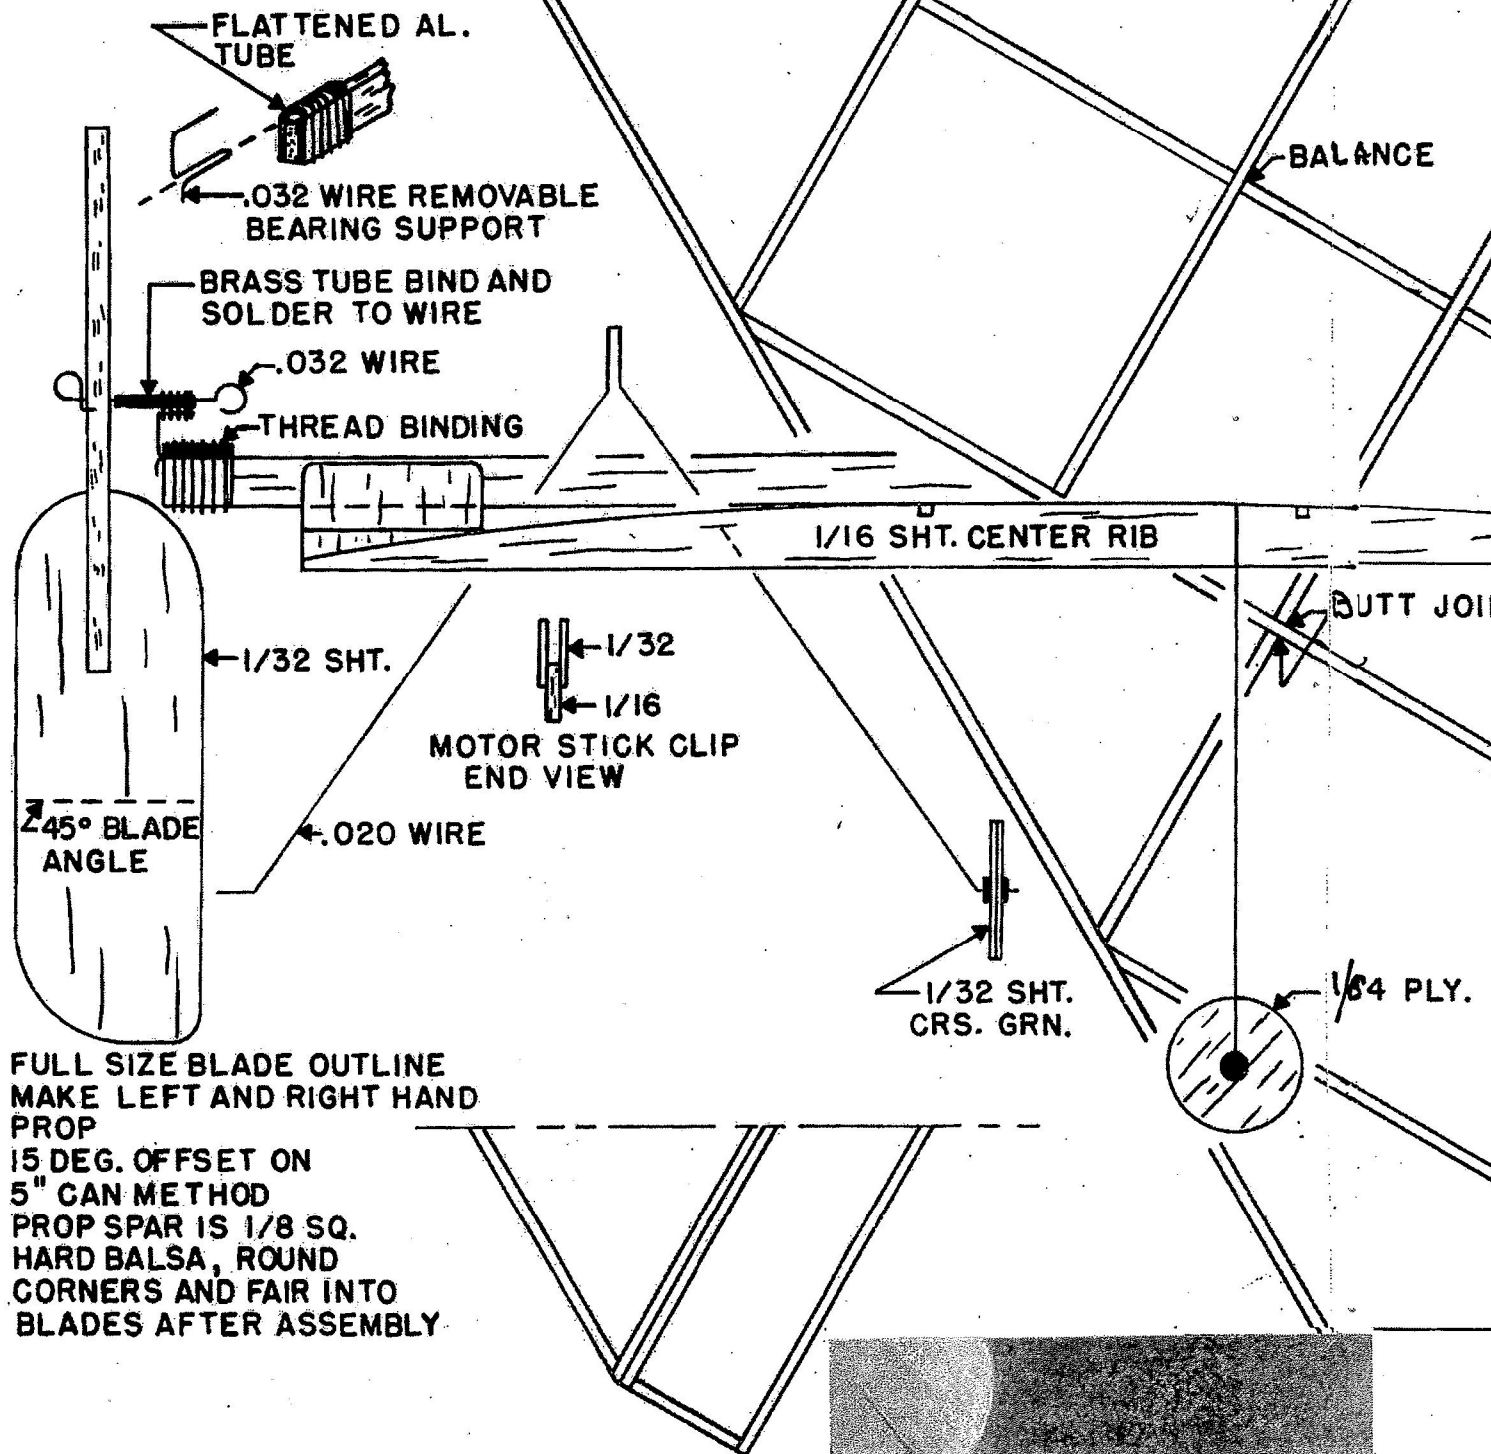

FULL SIZE BLADE OUTLINE  
MAKE LEFT AND RIGHT HAND  
PROP  
15 DEG. OFFSET ON  
5" CAN METHOD  
PROP SPAR IS 1/8 SQ.  
HARD Balsa, ROUND  
CORNERS AND FAIR INTO  
BLADES AFTER ASSEMBLY

Remarquer (à droite) le palier amovible  
qui facilite le remontage.

En utilisant du plastique de récup insensible à l'humidité  
(sac ou enveloppe de revue), on peut voler en  
extérieur par un beau soir d'été.

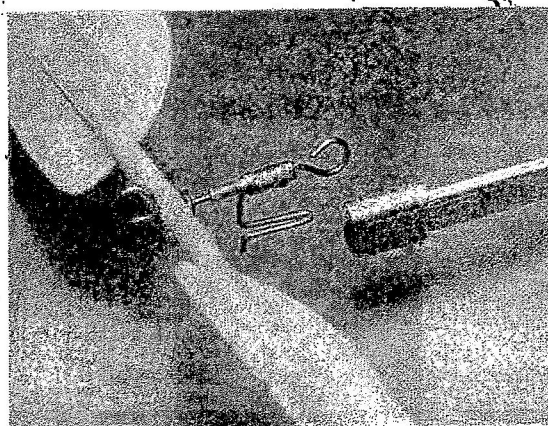

Jus