

1. STUDY THE PLAN.

2. MEASURE TWICE, CUT ONCE

3. CUT LONG PIECES FIRST.

4. TAKE YOUR TIME!

WING

POWER: ONE LOOP OF 1/16" OR ONE STRAND OF 1/8" FLAT RUBBER FOR INDOOR AND INITIAL OUTDOOR TESTING.. EXPERIMENT FOR BEST RESULTS.

MAY BE SET UP TO FLY IN RIGHT-HAND CIRCLES IF PREFERRED. "À CHAQUON SON GOÛT"

USE BALSA FOR ALL WOOD PARTS.

1/16" SQUARE




3/8" x 1/4" x 1/8" BALSA BEARING BLOCK

SIDE VIEW

4°-5°

BOTTOM VIEW SHOWING OFFSET NOTCH FOR PROP SHAFT BEARING TUBE (SEE ALSO PROP BEARING DETAIL DRAWING)

TAIL-FIRST TENDERFOOT
FULL SIZE PLANS BY KEN & BILL HANNAN

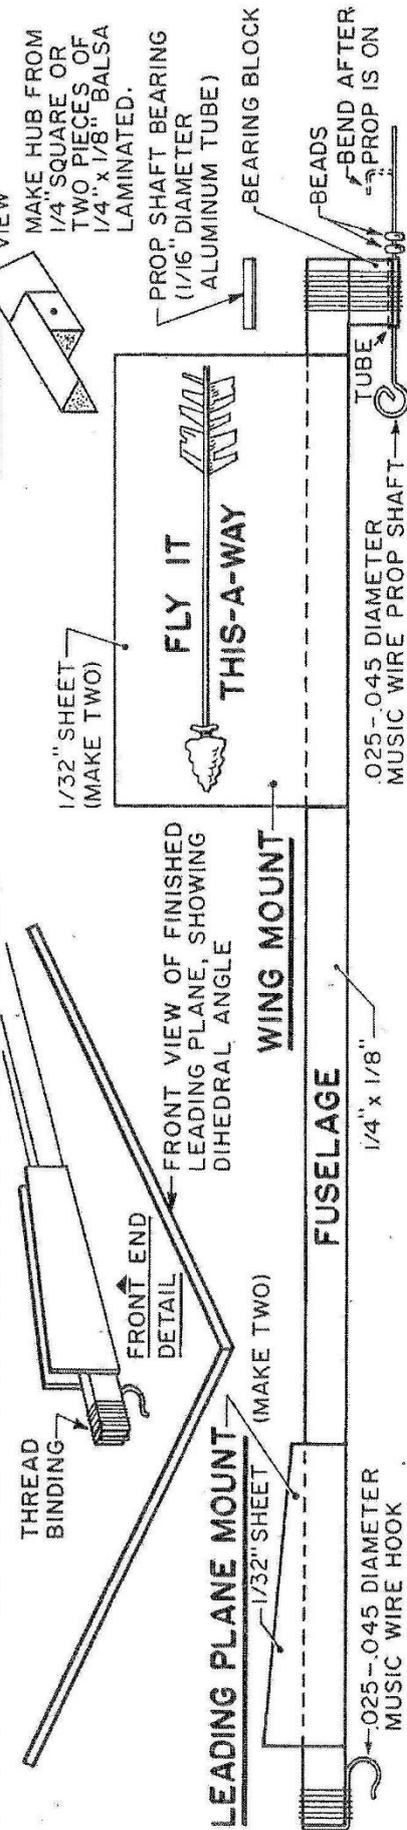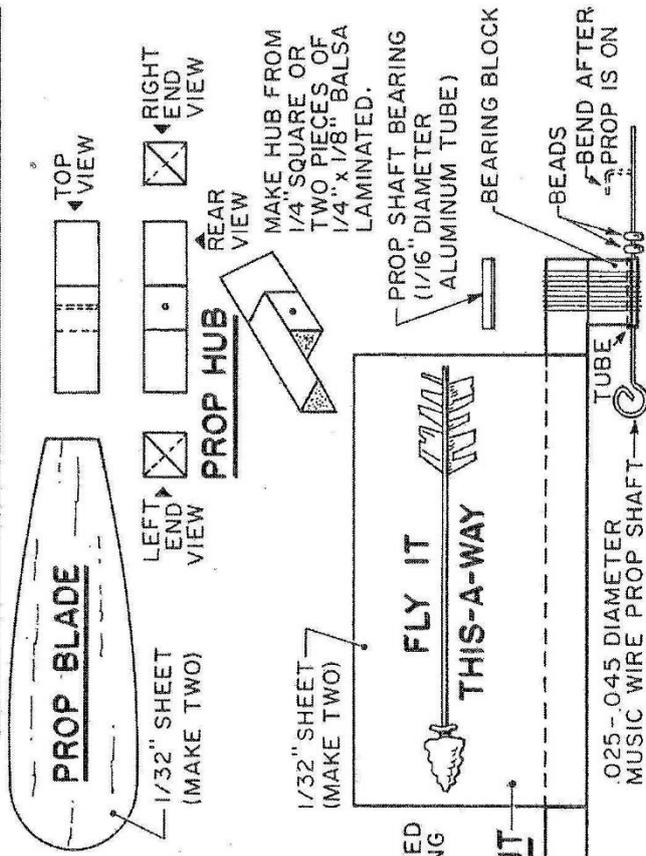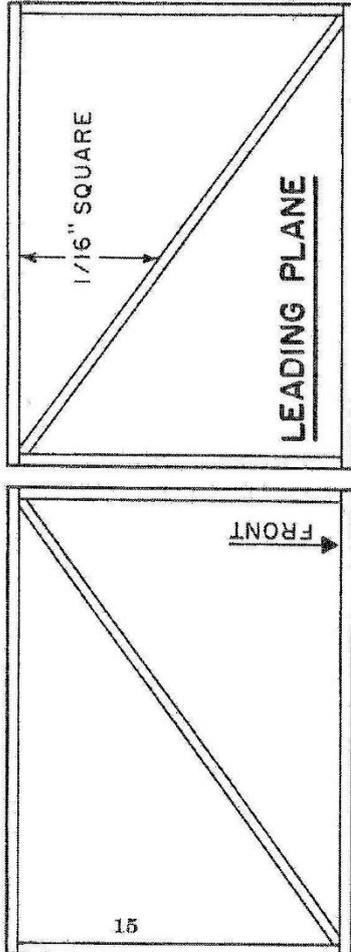

Un des modèles simples de Bill Hannan (il y en a de plus simples encore !).

Bien que n'étant pas ultra-léger, il devrait pouvoir voler dans le salon, la formule canard favorisant le réglage en tours serrés.